

Windows 10, Windows 11 users

No additional drivers installation is required.

Windows 7, Windows 8/8.1 users

Launch the executable file “zadig-2.5.exe”. Installation window will appear as shown in Figure 1 below.

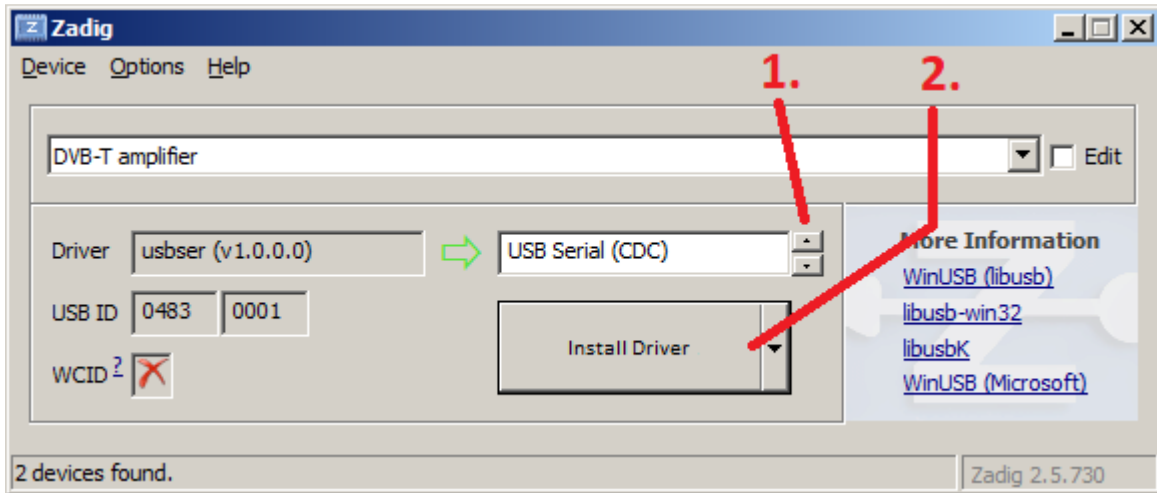


Figure 1. Drivers installation window.

1. Select „USB Serial (CDC)“ driver option using arrows as show in the Figure 1.
2. Click on the „Install Driver“ button and wait the process to finish.

Close the “Zadig” application. Device drivers is now installed. Now you can start using “TERRnet” application.